



Sample Preparation

Prepare Solutions

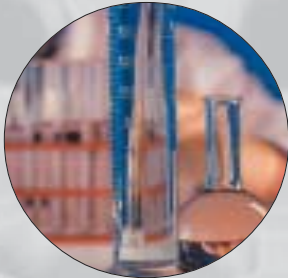


Extract Sample

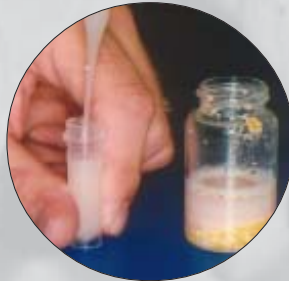


EnviroLogix GMO Plate Kit QuickGuide

Testing Procedure


1 Add Sample, Negative Control and Calibrators

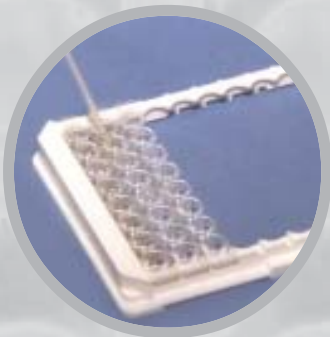


2 Mix & Incubate

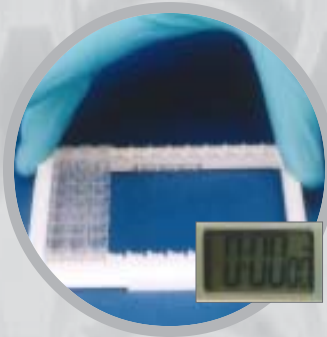


3 Add Conjugate

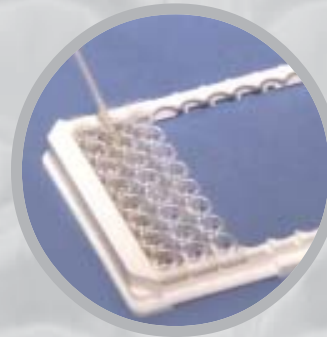


4 Mix & Incubate

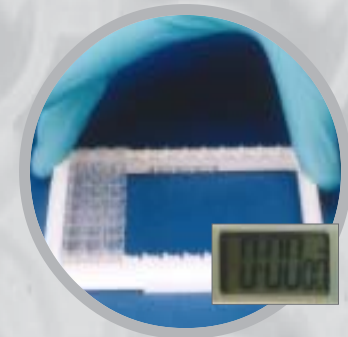


5 Wash Plate

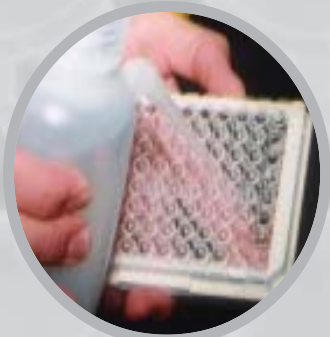


6 Add Substrate

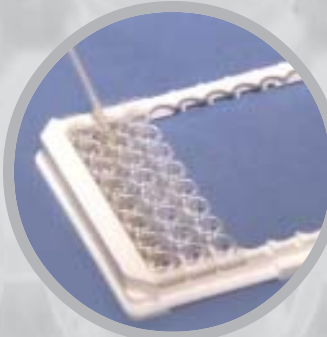

7 Mix & Incubate

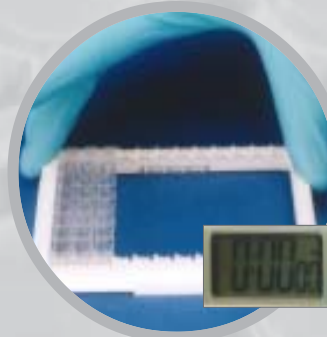

8 Add Stop Solution
Read Results

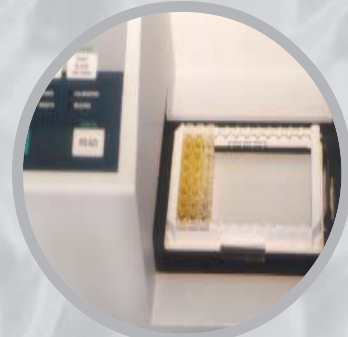

EnviroLogix Technical Support: Toll Free 1-866-408-4597

© EnviroLogix Inc. 2003